

GMB LITHIUM POLYMER BATTERY

Work Flow

1. Mixing

- Mix solvent and bond separately with positive and negative active materials. Make into positive and negative pasty materials after stirring at high speed till uniformity.



2. Coating

- Coat metal foils uniformly with the made-up pasty materials on two sides. Then make sheets dry.



GMB LITHIUM POLYMER BATTERY

Work Flow

3. Cutting

- Cut a roll of positive and negative sheet into smaller sheets according to battery specification and punching requests.



4. Pressing

- Press the above positive and negative sheets till they become flat.



GMB LITHIUM POLYMER BATTERY

Work Flow

5. Punching

- Punch sheets into electrodes according to battery specification.



6. Re-pressing

- Re-press electrodes till they become flat and stout.



GMB LITHIUM POLYMER BATTERY

Work Flow

7. Weighting

- Strictly choose the same weight cathodes and anodes to match according to battery design of capacity and layers.



8. Stacking

- Separate the cathodes and anodes completely by stacking separator into "s" according to battery specification and capacity.



GMB LITHIUM POLYMER BATTERY

Work Flow

9. Short Test

● A cell is formed after stacking. Test its insulation performance.



10. Welding tab

● Weld Al & Ni tabs to lead out anode & cathode terminals.




GMB LITHIUM POLYMER BATTERY

Work Flow


11.Short test

- Test a cell's insulation performance after tabs is welded, trimmed and pasted adhesive tape.

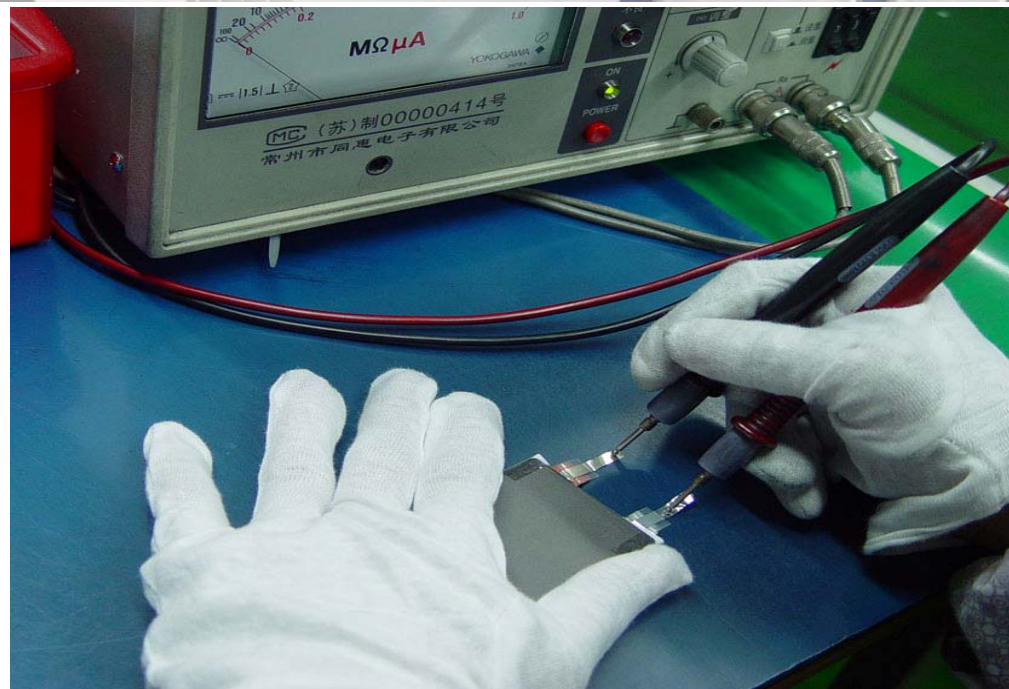

12.Sealing

- Seal the mouth and left side after putting the naked cell into punched Al compound packing film.

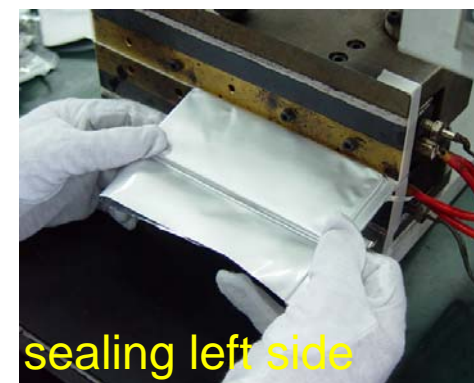

GMB LITHIUM POLYMER BATTERY

Work Flow

13. Short test

- Test a cell's insulation performance after it is sealed.



14. vacuum dry

- Dry the battery waiting for filling with vacuum to drain out wet gas completely in order to make sure the battery's quality.



GMB LITHIUM POLYMER BATTERY

Work Flow


15. Filling

● Fill electrolyte into battery by filling mouth, which should be finished in a dry glove box. Relative humidity is controlled below 1%RH.



16. Sealing

● Seal the filling mouth after filling, which should be finished in a dry glove box.

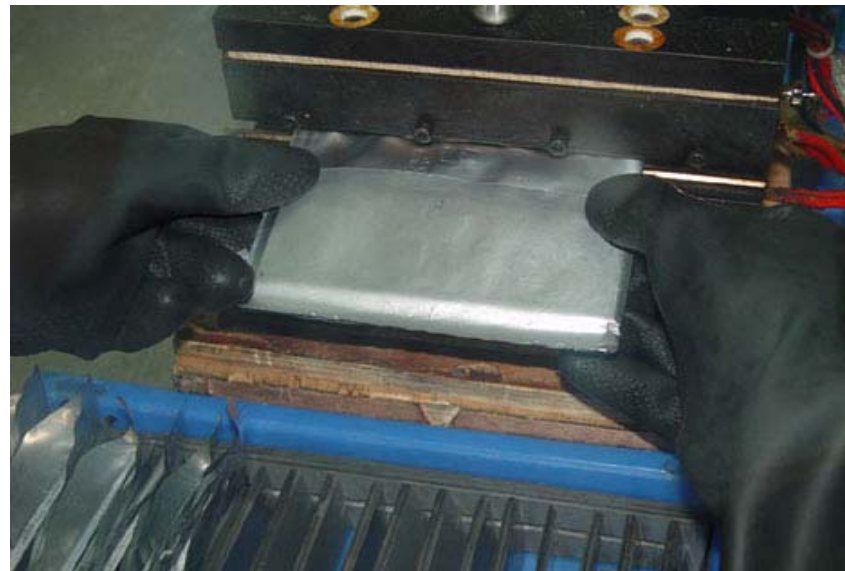


GMB LITHIUM POLYMER BATTERY

Work Flow

17. Inspection

- Inspect battery impedance and the weight of electrolyte to see if they meet the design requests.

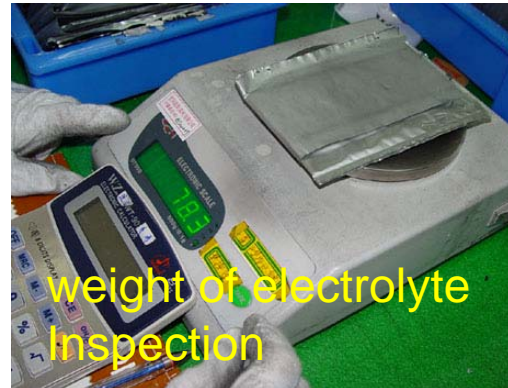

18. Formation

- Charge and discharge the fresh battery for one or several times, which is watched and recorded its performance by a computer at all times.




GMB LITHIUM POLYMER BATTERY

Work Flow


19. vacuuming

- The battery will produce gas after charging. Abstract gas from the battery till vacuum.

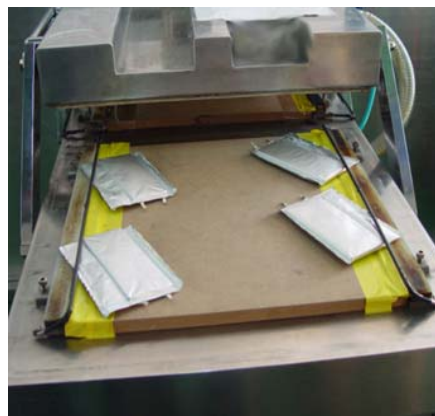

20. Sealing

- Seal right side of the battery to make sure its airtight performance.

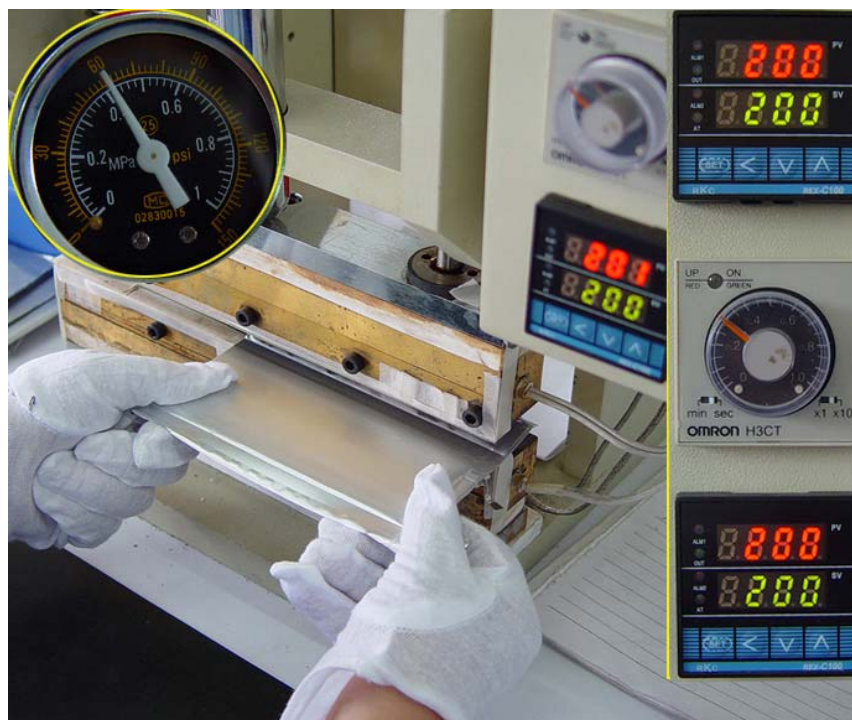

GMB LITHIUM POLYMER BATTERY

Work Flow

21. Folding

- Cut the redundant Al compound packing film of left & right sides and fold automatically at the same time with an automatic folding machine.



22. Capacity sorting

- Sort batteries according to their capacity with high-precision sorting equipments, which is watched and recorded their performances by computers at all times.



GMB LITHIUM POLYMER BATTERY

Work Flow

23. Aging

- Store the batteries in batches in warehouse after inspecting their impedance, voltage, capacity and size. The room temperature is 10~45°C and the humidity is $65 \pm 20\%$. The aging time is 30 days. The batteries is re-inspected regularly every 8 days during aging.




GMB LITHIUM POLYMER BATTERY

Work Flow

24.Assembly

● Assemble according to customers requests after aging. (The assembly styles can be different to meet the customer's requests). The operator must inspect every batch battery's voltage, impedance and so on before assembly.

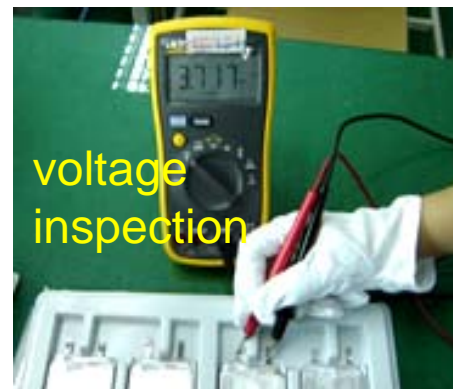



25. Outgoing inspection

- Inspect the battery performances according to GB/T18287-2000. The battery can't leave the factory until OQC consider it qualified after sampling inspection according to GB/T2828.1



impedance inspection



voltage inspection



constant temperature & humidity test



shock test



capacity & charging/discharging inspection



constant temperature cycle test



GMB LITHIUM POLYMER BATTERY

Work Flow

26.Packing

- Package consists of an inner plastic tray and an outer carton. Enlace cartons to fasten with strapping strips on stack board. Finally coat clear plastic film on these cartons to moisture-proof. This is to make sure safe transportation and to meet the regulations of GB191-1990 Packaging-Pictorial Marking for Handling of Goods.





GMB LITHIUM POLYMER BATTERY

Work Flow

**Thank you for
watching!**